





Guideline for installation and maintenance of magnetic locks



art. A5

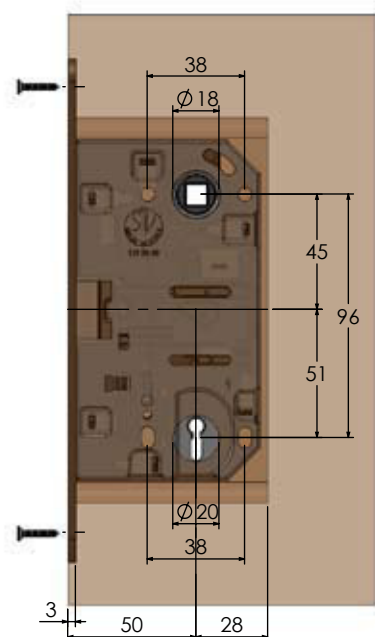


art. A7

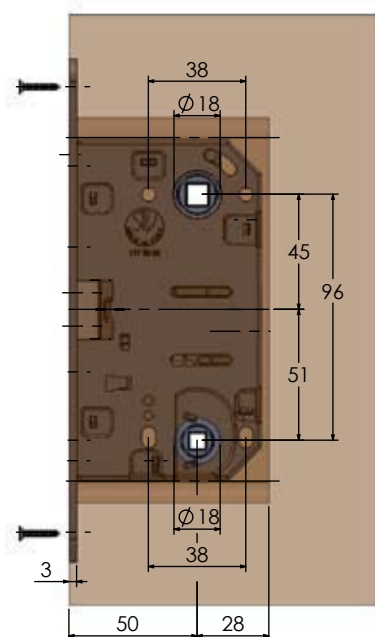


art. A6

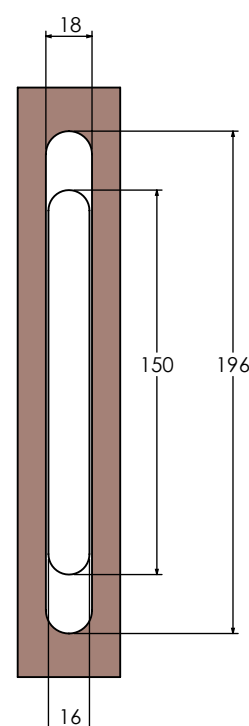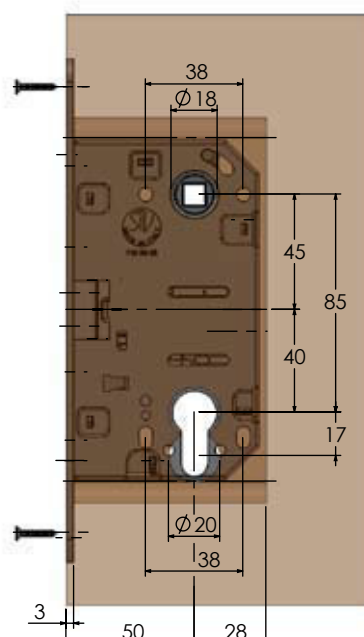

Art. W7

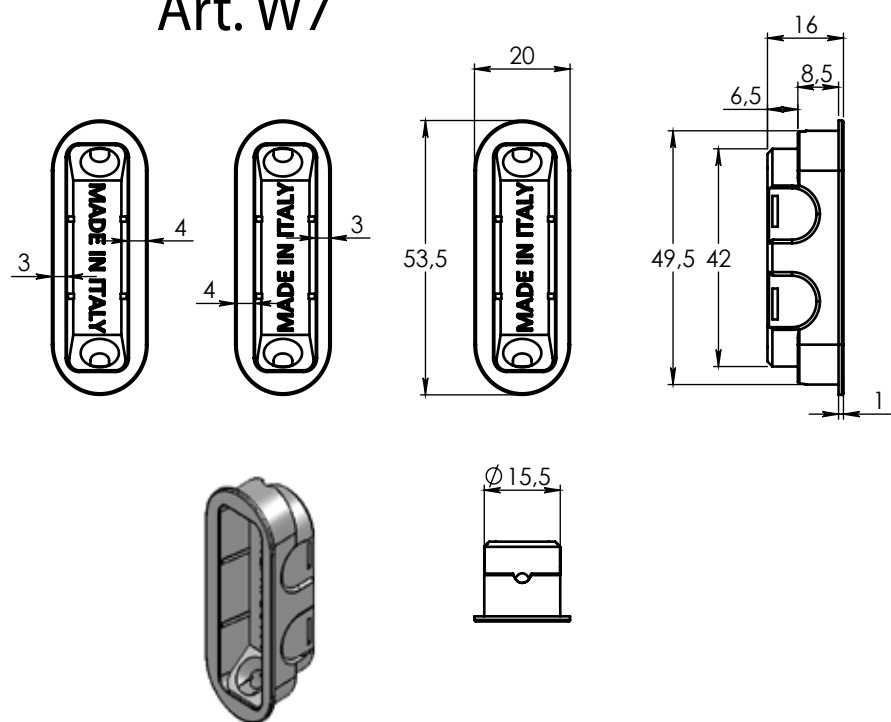

reversible/adjustable

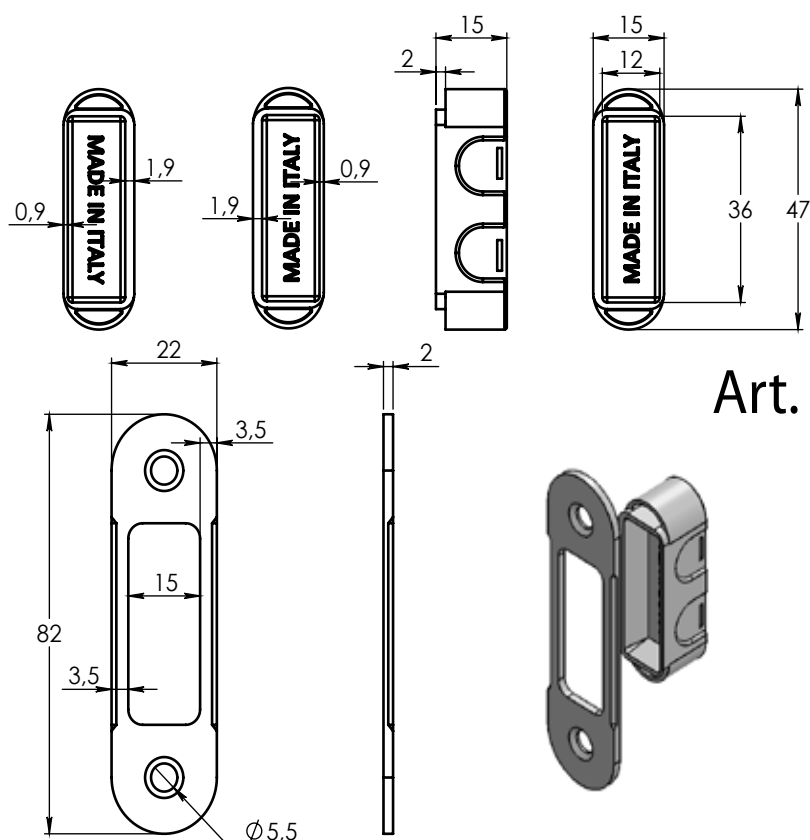

Art. W8

reversible/adjustable

installation and maintenance

- 1 - Lock position have to take in account the type af gasket used
- 2 - Rout the panel as shown in the drawings
- 3 - Do not use a hammer or other tools to insert the lock into the groove
- 4 - Mustn't go into the lock's mechanisms wood shavings, sawdust, or other external bodies
- 5 - The fixing screws of the handles should not crush or puncture the lock's casing
- 6 - It is recommended not to exceed a distance of 3 mm between the front and strikings
- 7 - Lubrificate with spray silicone the moving parts of the lock (at list one time every 6 months)
- 8 - For cleaning do not use abrasive products or solvent complements, clean with a soft cloth
- 9 - Do not paint the front
- 10 - To optimize the closing of the door, rotate the striking of 180 °